

















Notes:

Start with indicator powered on and in normal weighing mode. The indicator setup & build must be configured before performing the calibration routine. QCK.CAL option must also be enabled in SPEC menu.

1		Press & hold ZERO for 2 seconds to access QCK-CAL mode	
		ZERO is displayed – then flashing live weight	
2		Remove any weight from scale. Press PRINT to capture zero calibration	
		Calibrated live weight will be flashing	
3		Press ZERO key to skip to SPAN calibration	
	Add Weight	Add weights to scale at flashing screen -	
4		Press PRINT key to get to entry prompt Selected digit is flashing	
5		Enter Weight Value: Use the PRINT key to change digit Use the SELECT Key to move digit	
6		Once correct weight value is showing press the F key	
7		After S. in P weight will be flashing Press the ZERO key to successfully exit Calibration	