


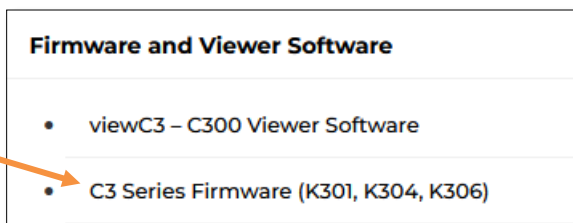

The C3 instrument allows for different language menu files. Currently they need to be manually loaded after firmware upgrade. The aim is to migrate this feature into future updates. If you have a pre-release unit then this procedure will help you to update your unit to the current released version along with applicable language files.

*Note: Your instrument will ask for a P.Code after updating, reach out to your local office for assistance in this matter.*


Start with indicator powered on and in normal weighing mode

Download necessary programs using a Windows PC. C3 Viewer, C3 Firmware as well as the Rinstrum Serial Tool:  
[www.rinstrum.com/all-downloads/](http://www.rinstrum.com/all-downloads/)




 C300-500-1.0.0-M02.exe	Application	410 KB
 EN.txt	Text Document	3 KB

1

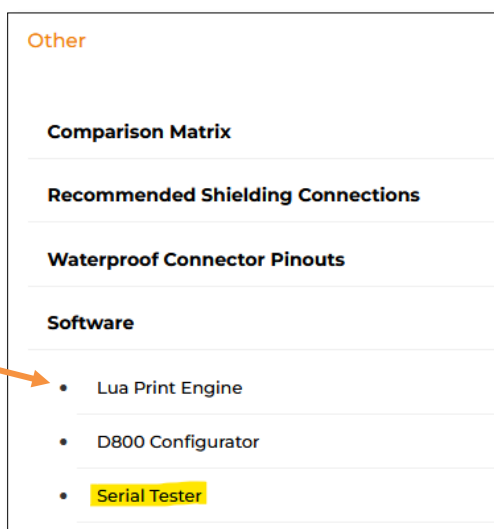

Run the firmware exe file. Note – Windows Protected your PC. Select 'More info'

2


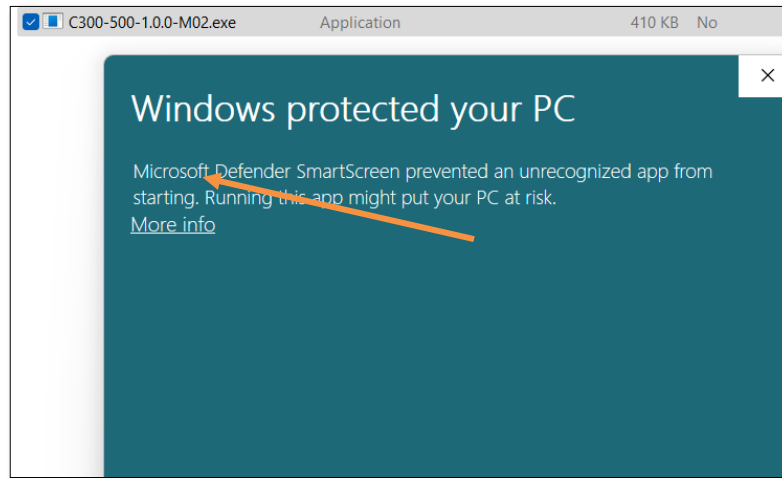


Select Run anyway:




Select the Start button then select COM Port. If not sure check Windows device manager. The appropriate port will be the one that says Prolific PL230X USB Serial COM Port.

3

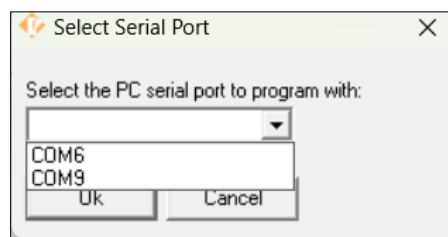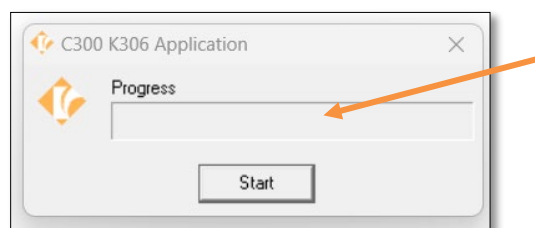


Select Next >>>

4

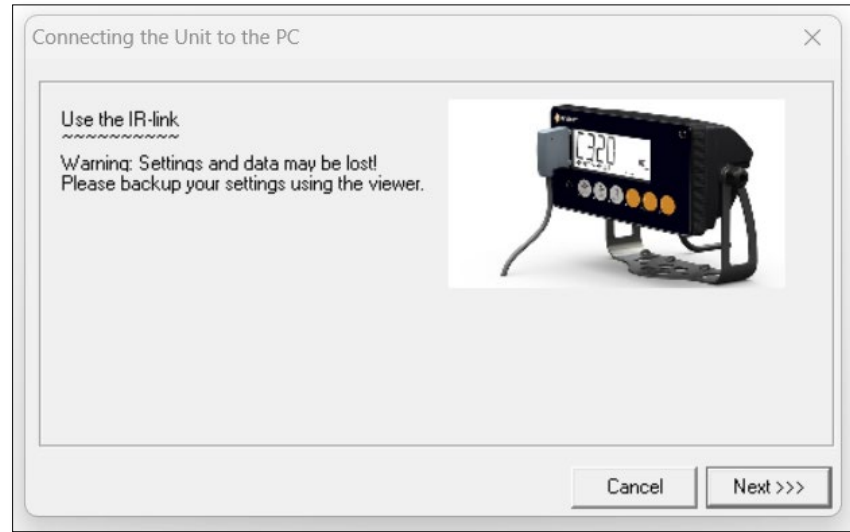


This message will appear if not connected with rin-link cable or other reason. Disconnect power to indicator while leaving rin-link on the front. Then click "OK". Next prompt will say Reset, (apply power). This will forcibly reflash the unit.




5

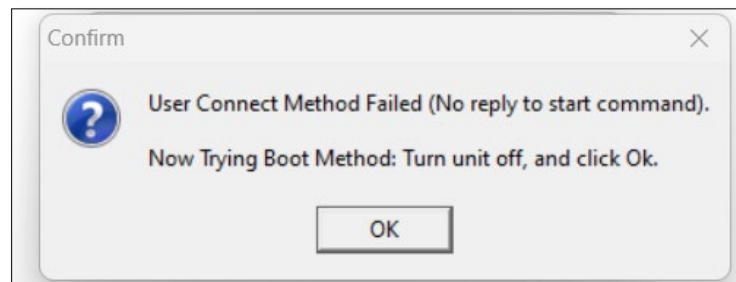

Upon completion of re-flashing/updating Firmware: Close Flash tool. Open Serial tool & Select Connect Button. Then select appropriate Com port:

6

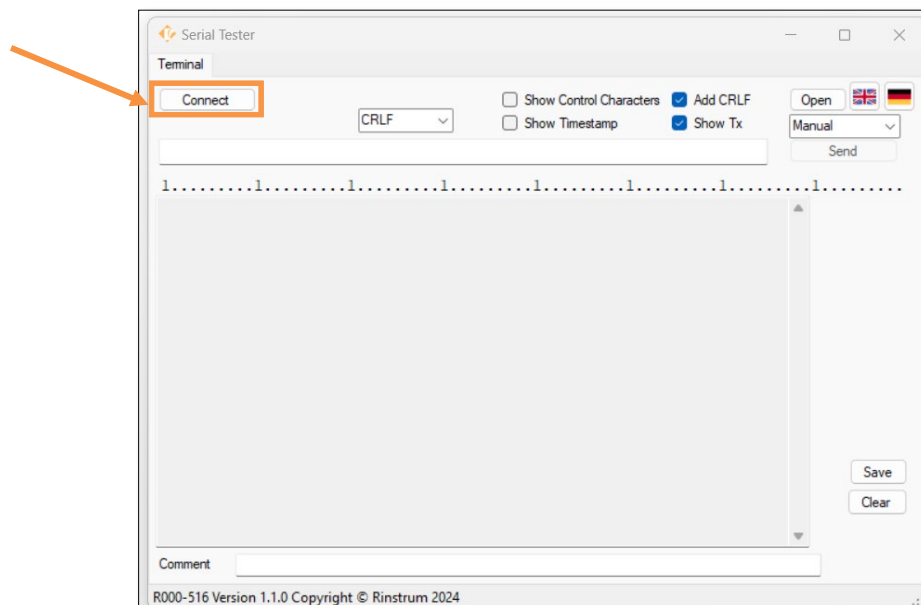

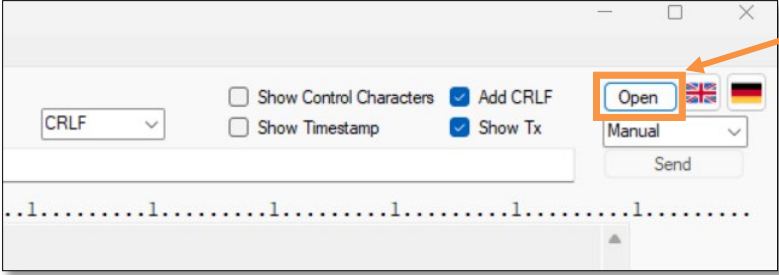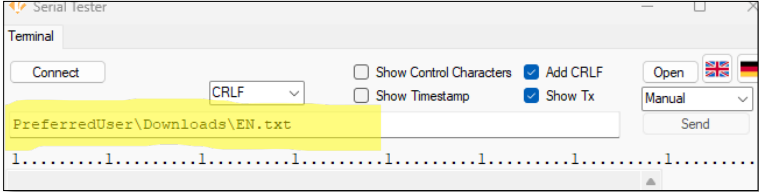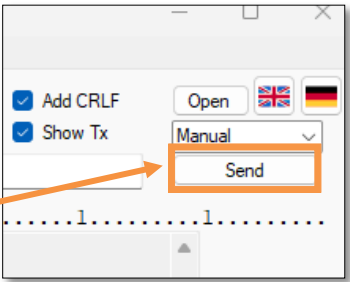7	<p>Select the Open button to load preferred language file. Navigate to file location “Downloads” etc.</p> 
8	<p>File will be queued in the white box with the name of the language file:</p> 
9	<p>Finally use the Send button to transmit language files into C3 Indicator:</p> 

Reach out to your local office for assistance:

**Rinstrum Inc**

**Toll Free 1 877 829 9152**

Email  
Sales: [sales.US@rinstrum.com](mailto:sales.US@rinstrum.com)

Email Technical  
Support: [support.US@rinstrum.com](mailto:support.US@rinstrum.com)

**Rinstrum Pty Ltd**

**Tel: + 61 7 3216 7166**

Email  
Sales: [sales.AU@rinstrum.com](mailto:sales.AU@rinstrum.com)

Email Technical  
Support: [support.AU@rinstrum.com](mailto:support.AU@rinstrum.com)

**Rinstrum Europe GmbH**

**Tel: 49(0)2173 165 62- 10**

Email  
Sales: [sales.EU@rinstrum.com](mailto:sales.EU@rinstrum.com)

Email Technical  
Support: [support.EU@rinstrum.com](mailto:support.EU@rinstrum.com)